

Installation Manual

Installationsanleitung
Manuel d'installation
Installatiehandleiding
Manual de instalaci3n
Manuale d'installazione
Εγχειρίδιο εγκατάστασης
Manual de instalaç3o


Руководство по монтажу
Montaj kılavuzu
Installationsvejledning
Installationshåndbok
Installeringshåndbok
Asennusopas
Instalační návod

Priručnik za postavljanje
Szerelési kézikönyv
Instrukcja montażu
Manual de instalare
Priručnik za montažo
Ръководство за монтаж
Návod na inštaláciu


BRP069A42

EN	DE	FR	NL	ES	IT	EL	PT	RU		TR	
Caution	Vorsicht	Attention	Voorzichtig	Precaución	Attenzione	Προσοχή	Cuidado	Предостережение		İkaz	
DA	SV	NO	FI	CS	HR	HU	PL	RO	SL	BG	SK
Pas på	Försiktigt	Forsiktig	Huomio	Varování	Oprez	Vigyázat	Ostrożnie	Precauție	Pozor	Внимание	Upozornenie


BRP069A43

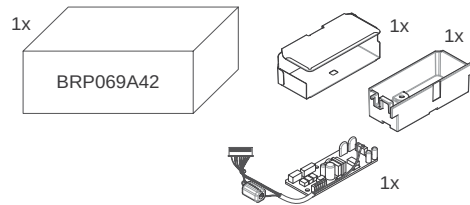


BRP069A44

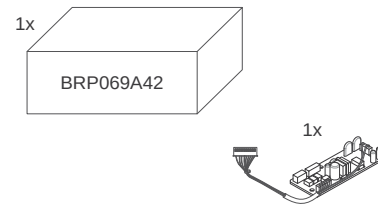


BRP069A43 / BRP069A44

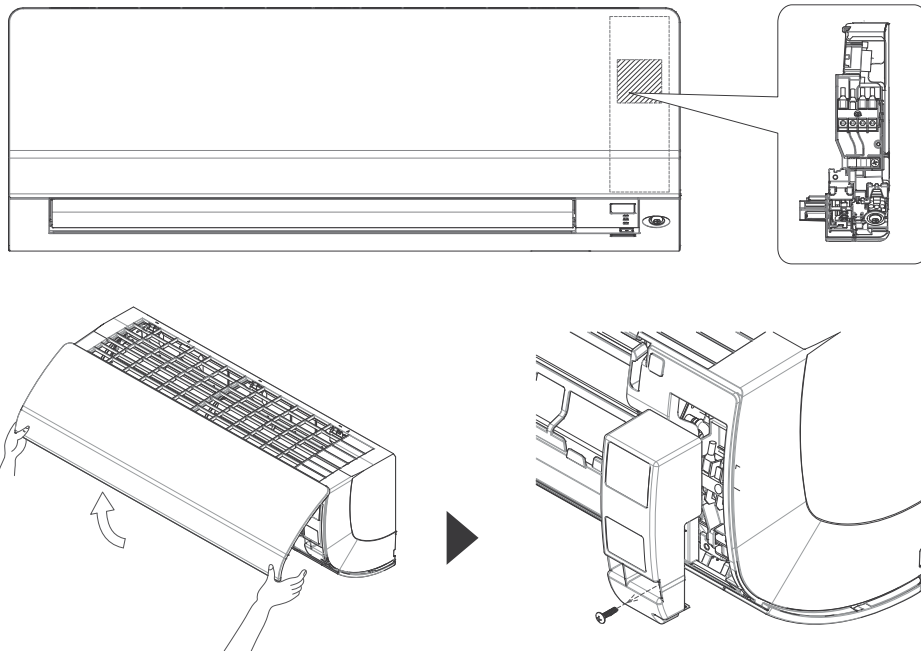




BRP069A43 / BRP069A44

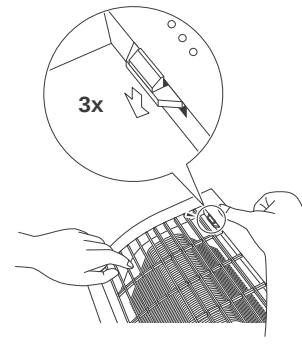

BRP069A43 / BRP069A44


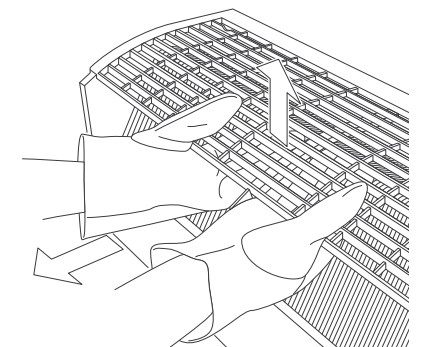


BRP069A43 / BRP069A44

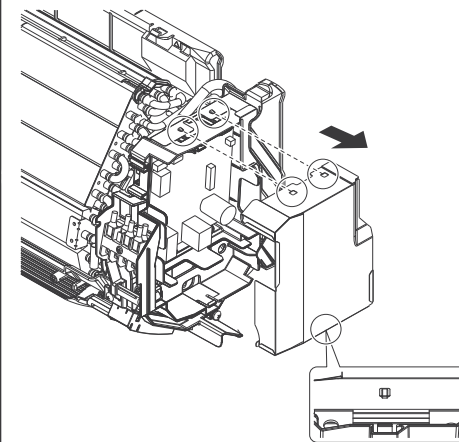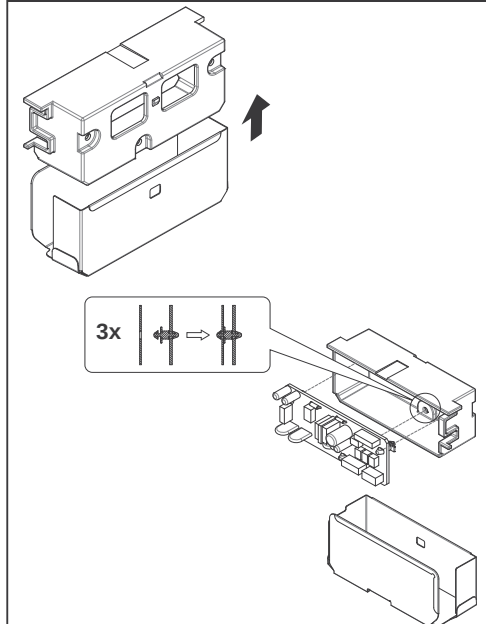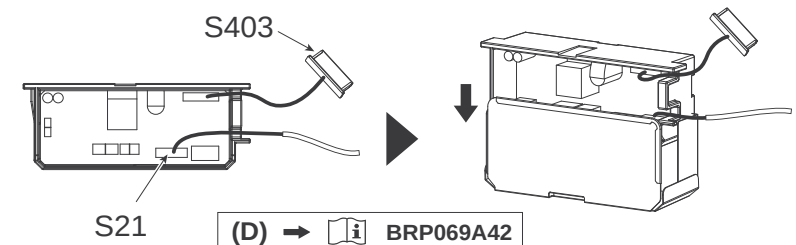
BRP069A43 : FTXS20/25K, FTXM20/25K, ATXS20/25K
FTX20/25/35J, ATX20/25/35J, CTXS15/35KBRP069A43 : FTXS20/25K, FTXM20/25K, ATXS20/25K
FTX20/25/35J, ATX20/25/35J, CTXS15/35K

(D) → i BRP069A42




BRP069A43 : FTXS20/25K, FTXM20/25K, ATXS20/25K
FTX20/25/35J, ATX20/25/35J, CTXS15/35K

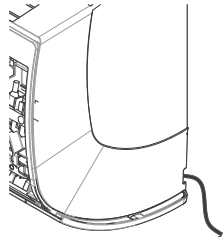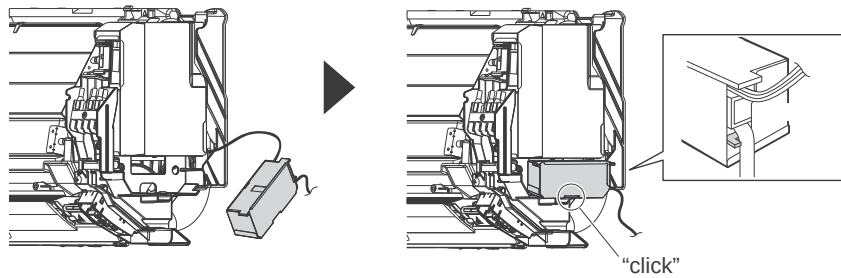


BRP069A44 : FTX50/60K

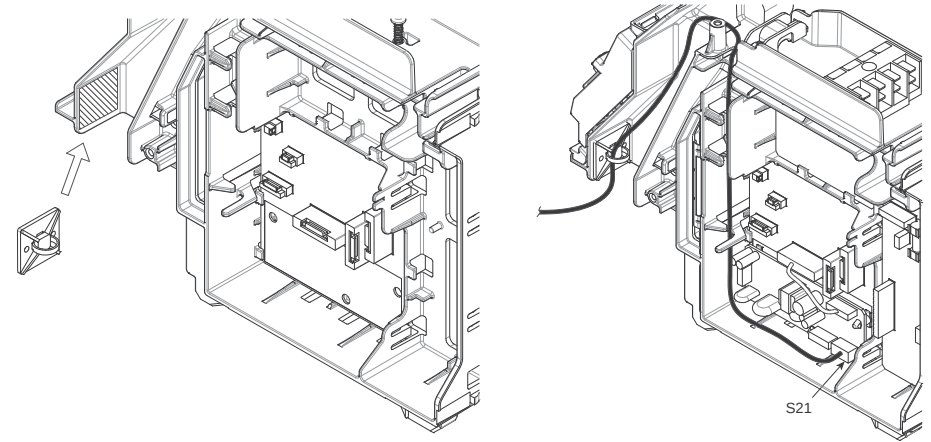


BRP069A43 / BRP069A44 : FTX20/25/35K, FTX50/60K

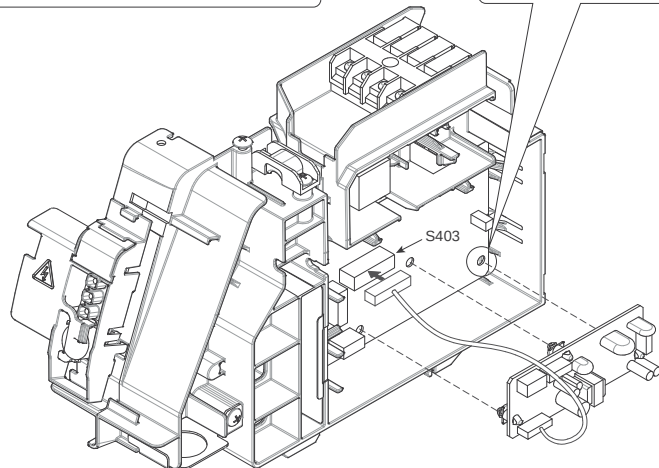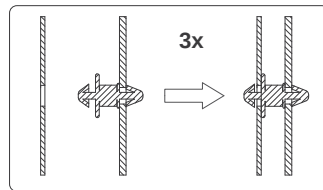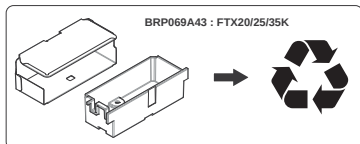

BRP069A43 : FTX20/25/35K

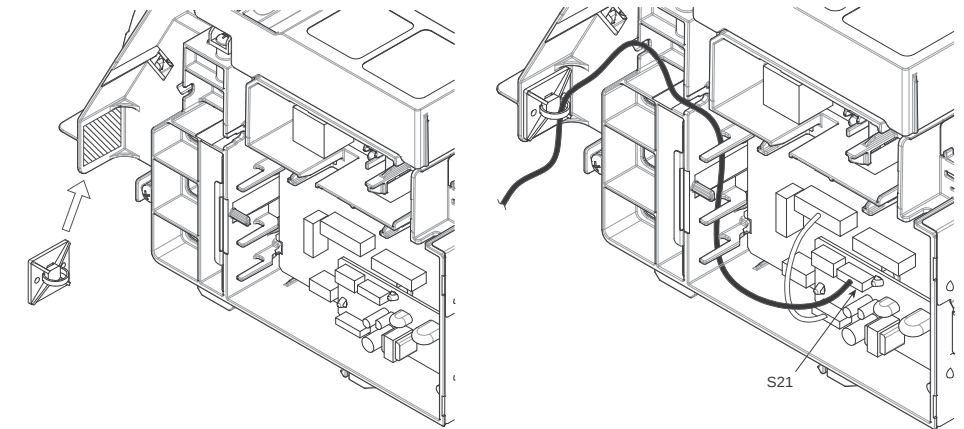

BRP069A43 / BRP069A44

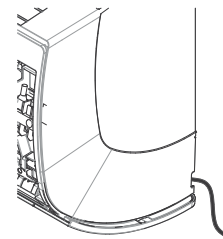

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.
U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

Copyright 2015 Daikin